


# ASSEMBLY INSTRUCTION

# BOOTY BUILDER

# STANDING ABDUCTOR


# SELECTORIZED

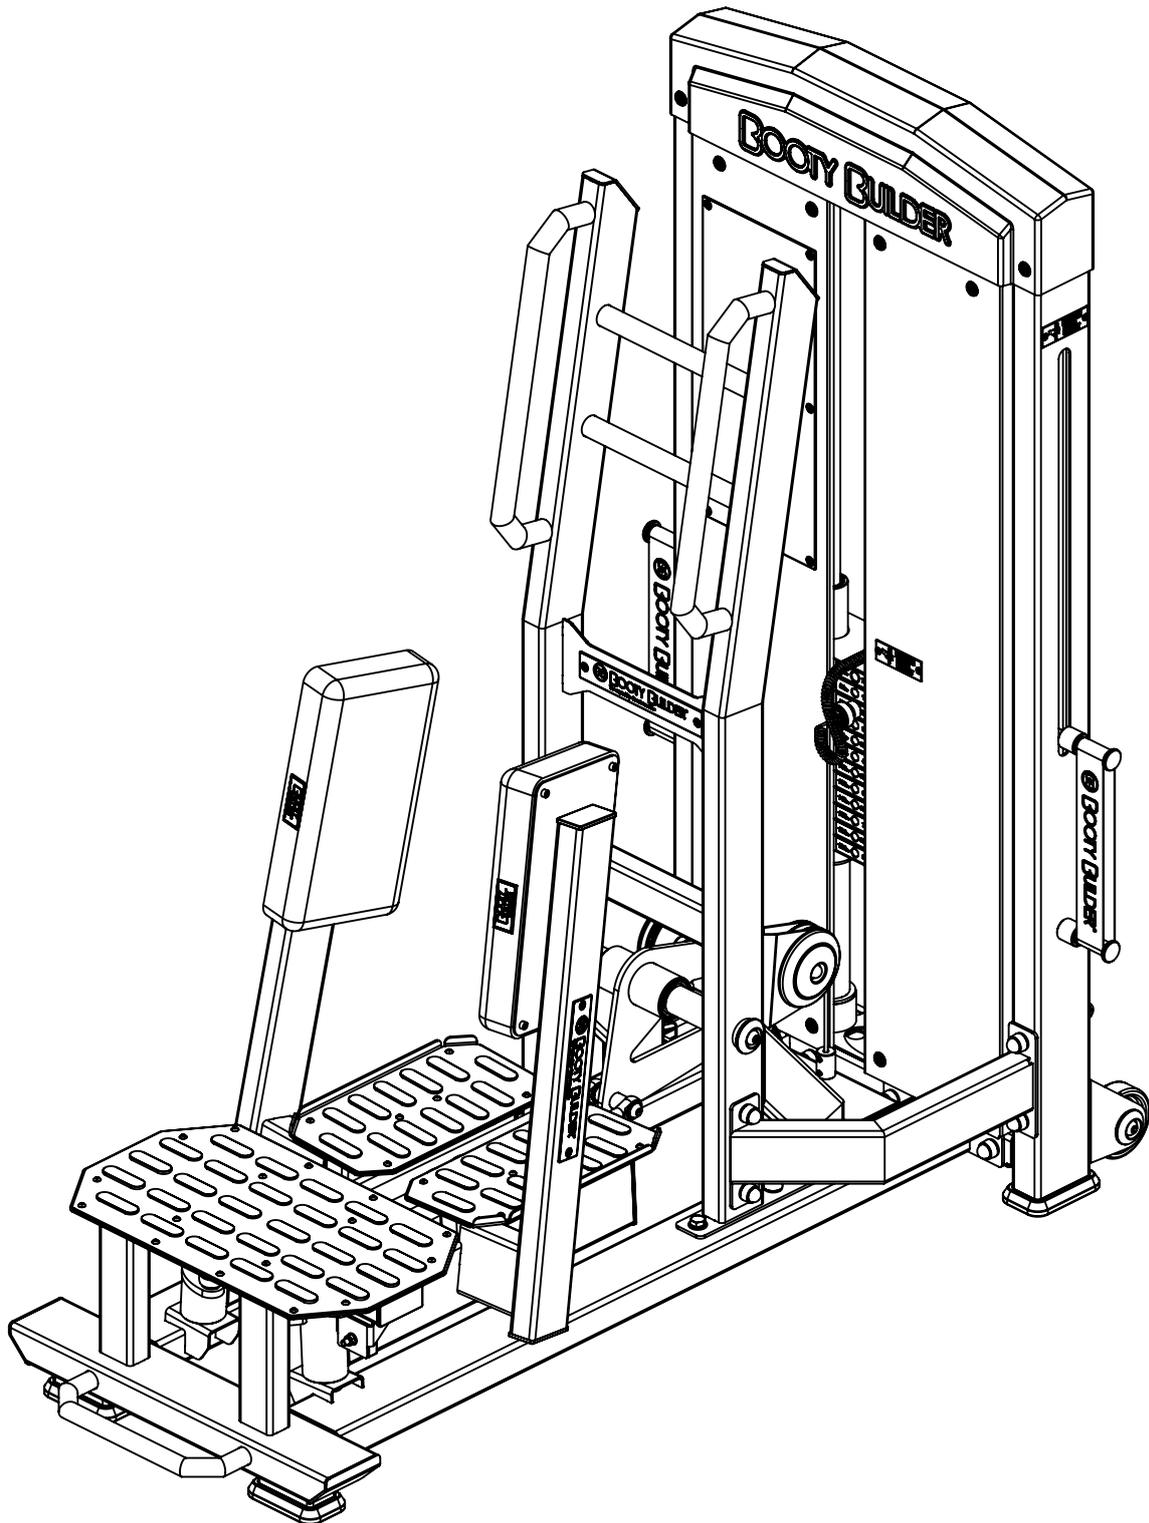


# BEFORE ASSEMBLY

- **This must be read before you start assembling this unit.**
- **You must follow the assembly instructions exactly as outlined.**
- **Assemble this unit starting at the beginning and work to the end.**
- **The assembly instructions are set out so that you are only doing one section at a time, therefore you will finish one section and move on to the next.**
- **If something is missing when assembling this unit, you must notify us of the partnumber of the exact nut, bolt of part that is missing.**
- **To help you assemble this unit we have used line drawings.**
- **Check the line drawings for the exact positioning of the parts.**
- **The unit will need to be checked at least once a week for nuts and bolts that can work loose, upholstered pieces working loose and wear on pivot assemblies.**


## TOOLS NEEDED





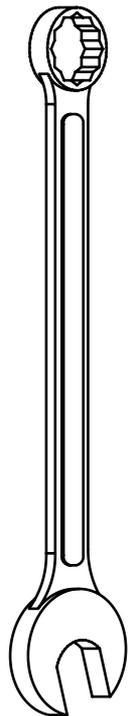







**2x 19mm**

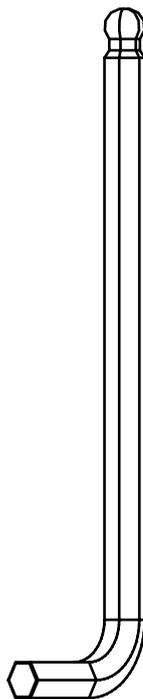


**8mm  
6mm**

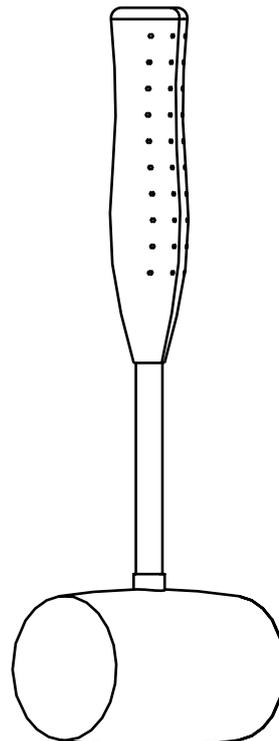


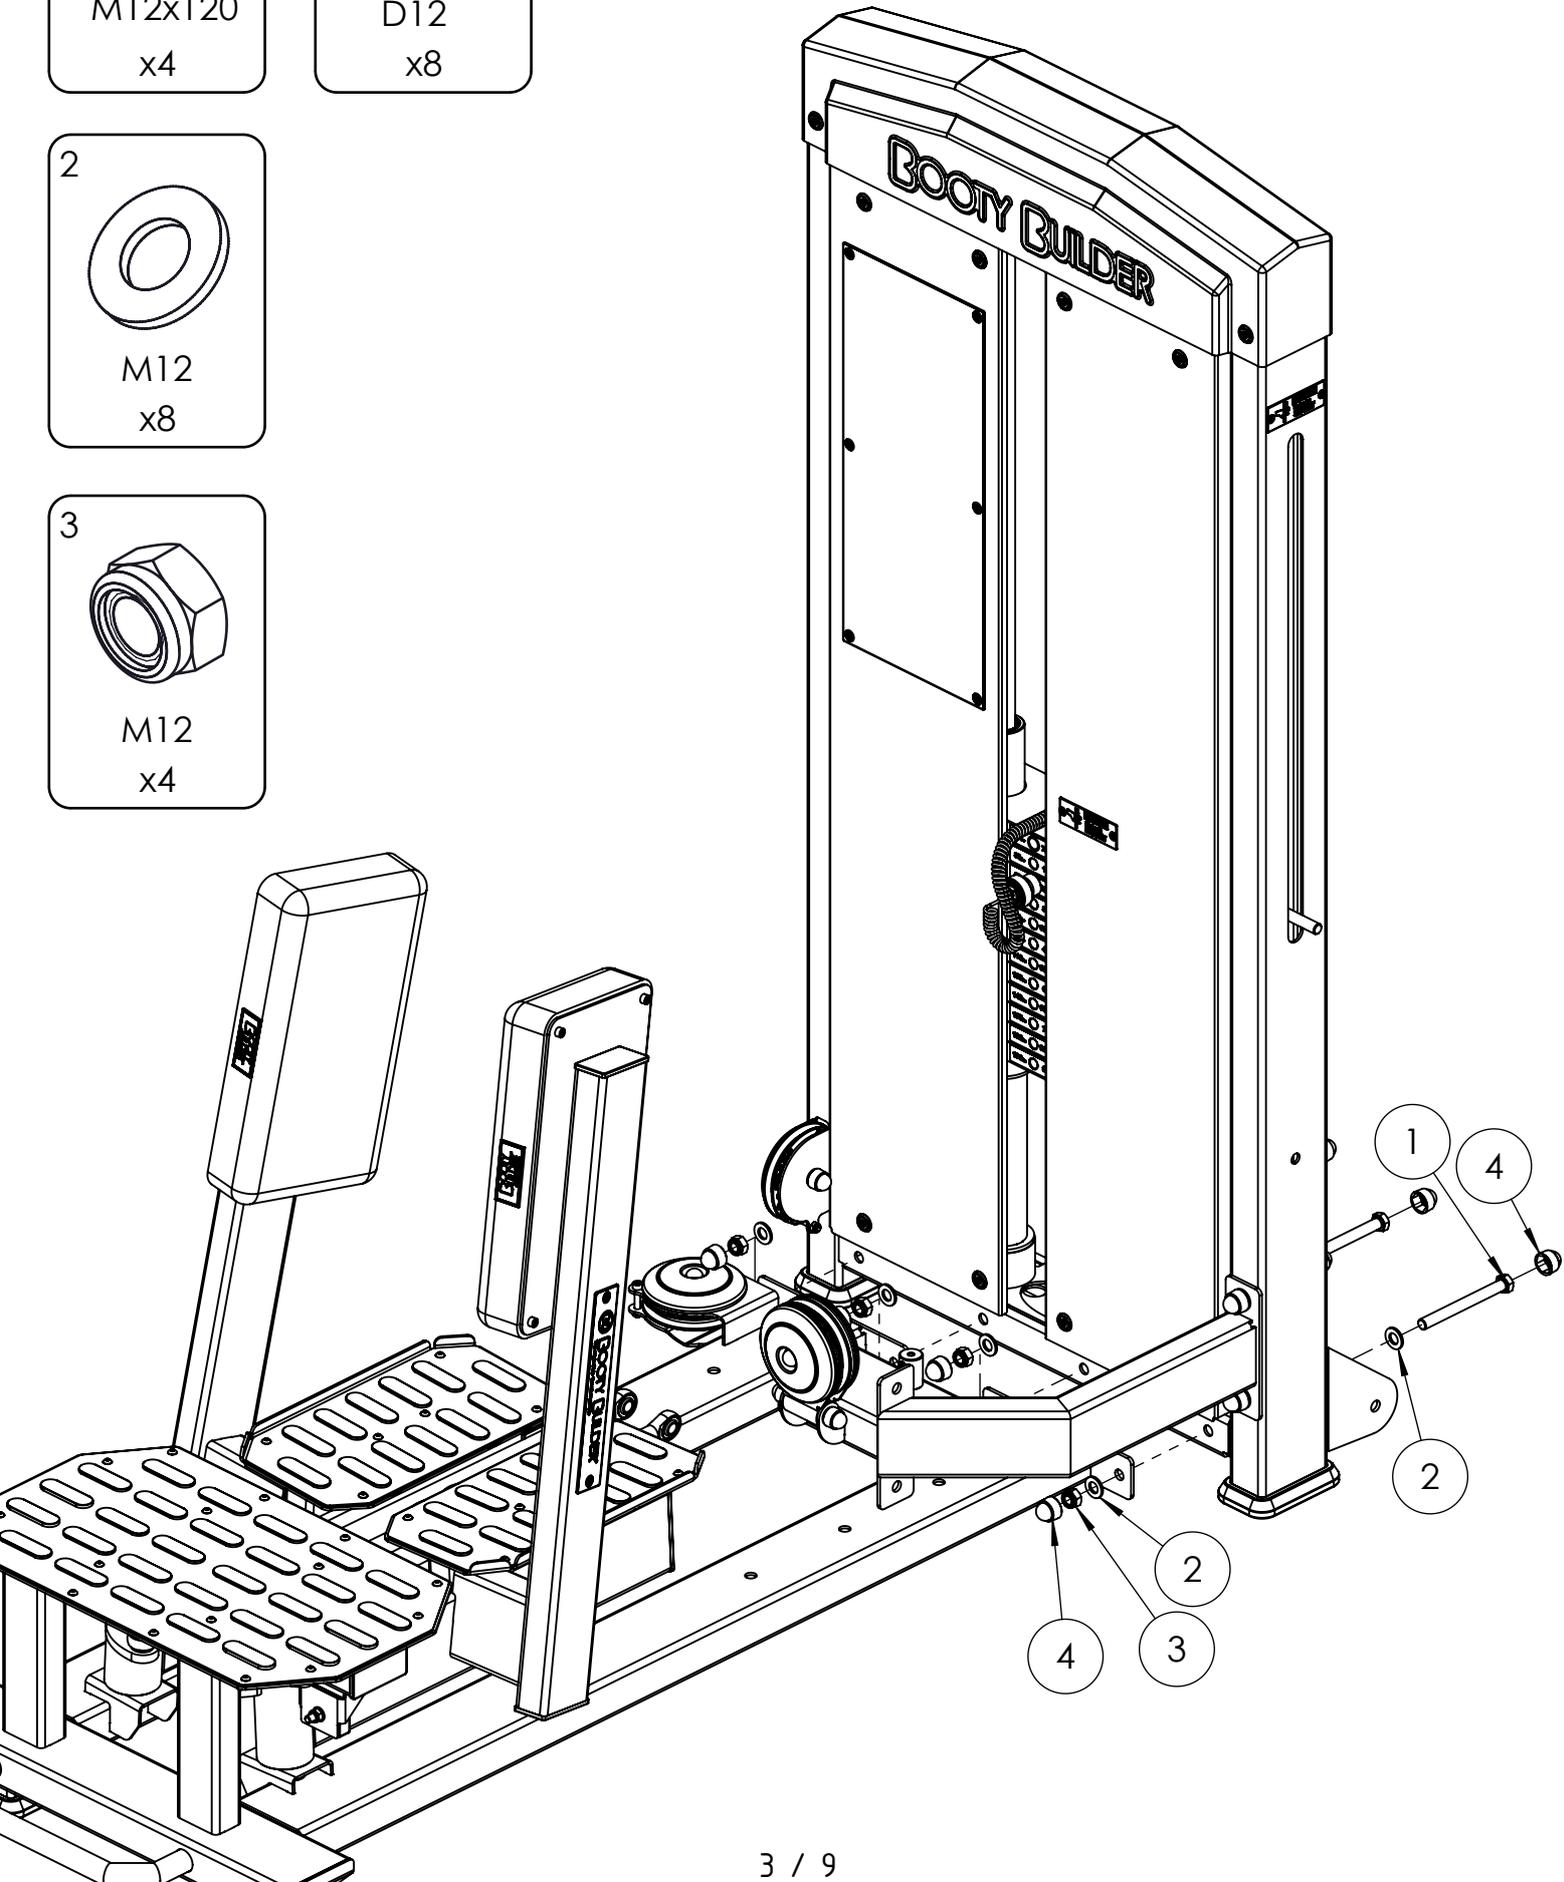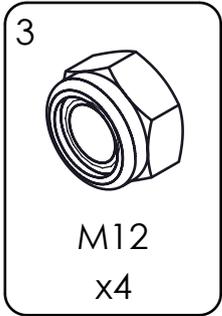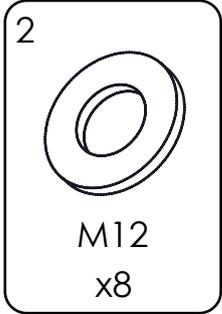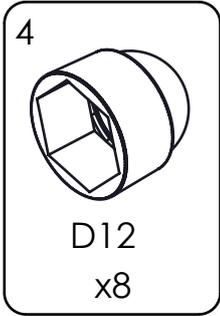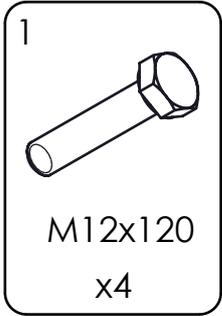


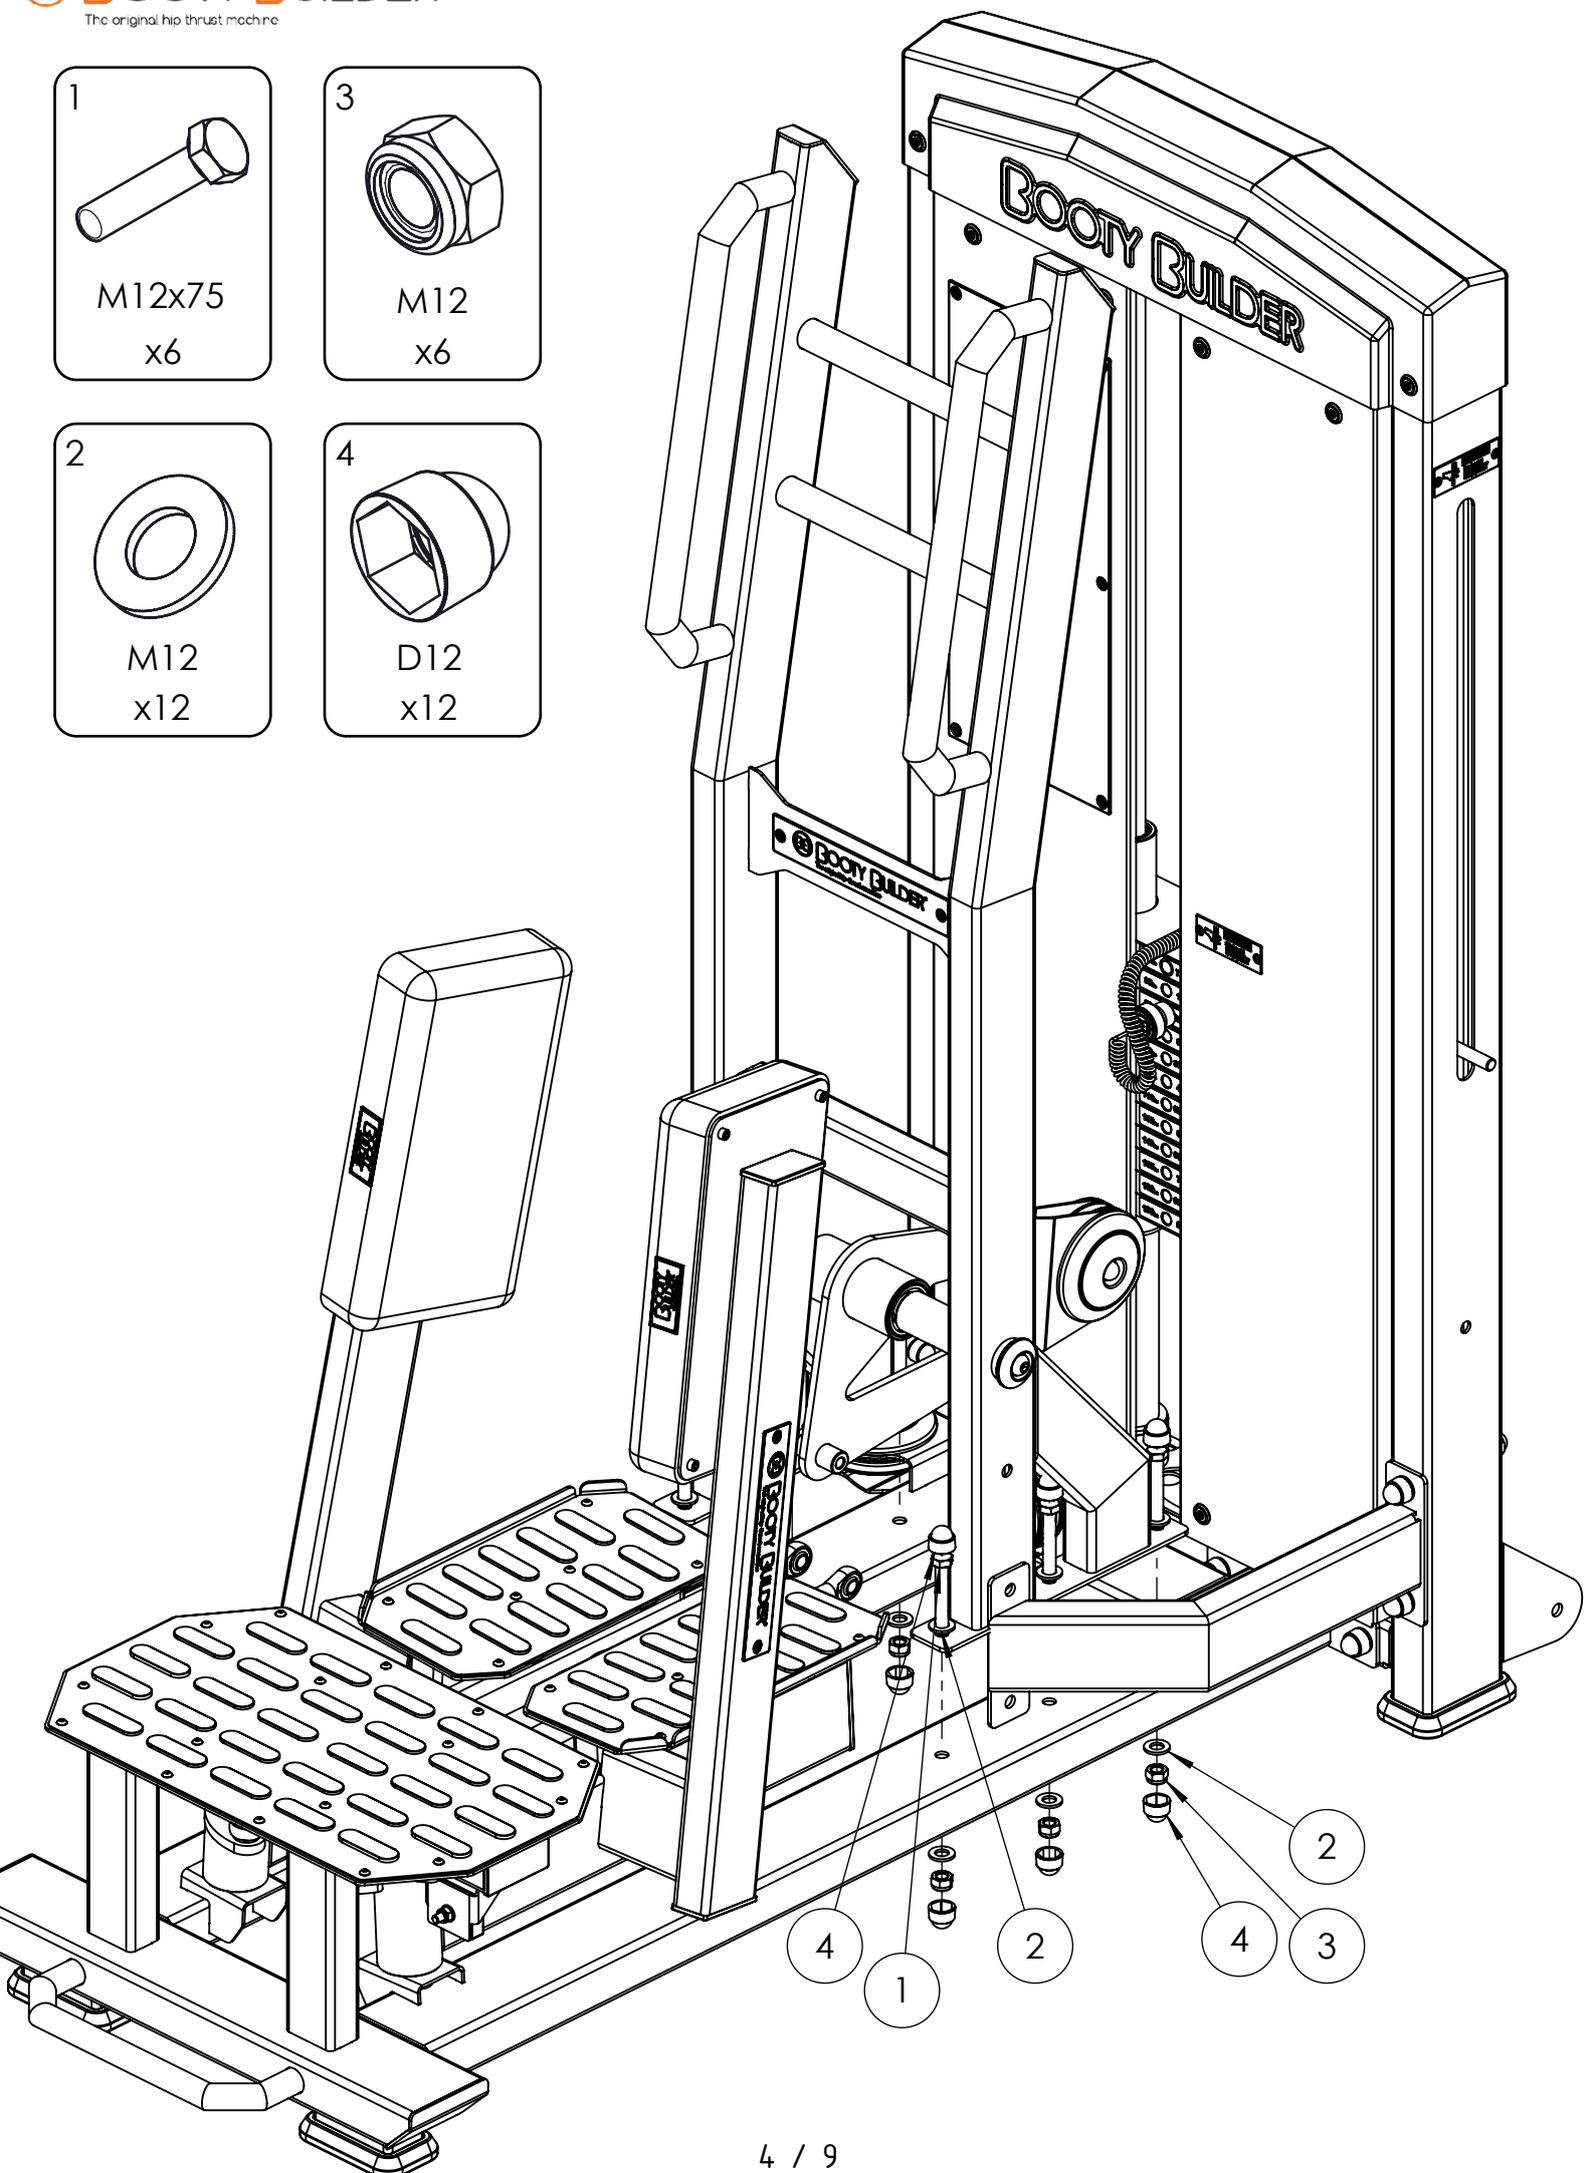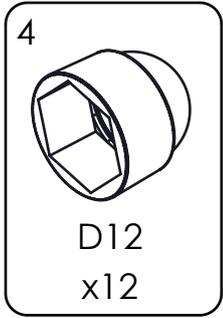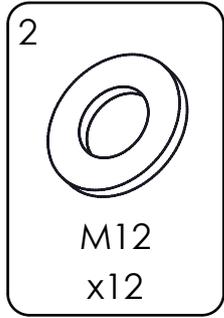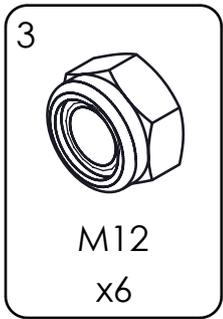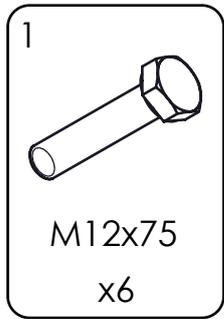


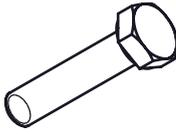
1  
  
 M12x65  
 x2

3  
  
 M12  
 x2

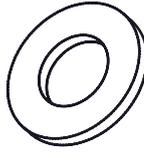2  
  
 M12  
 x4

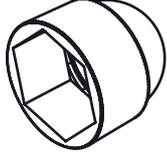
4  
  
 D12  
 x4

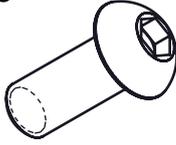
5  
  
 M12x40  
 x2

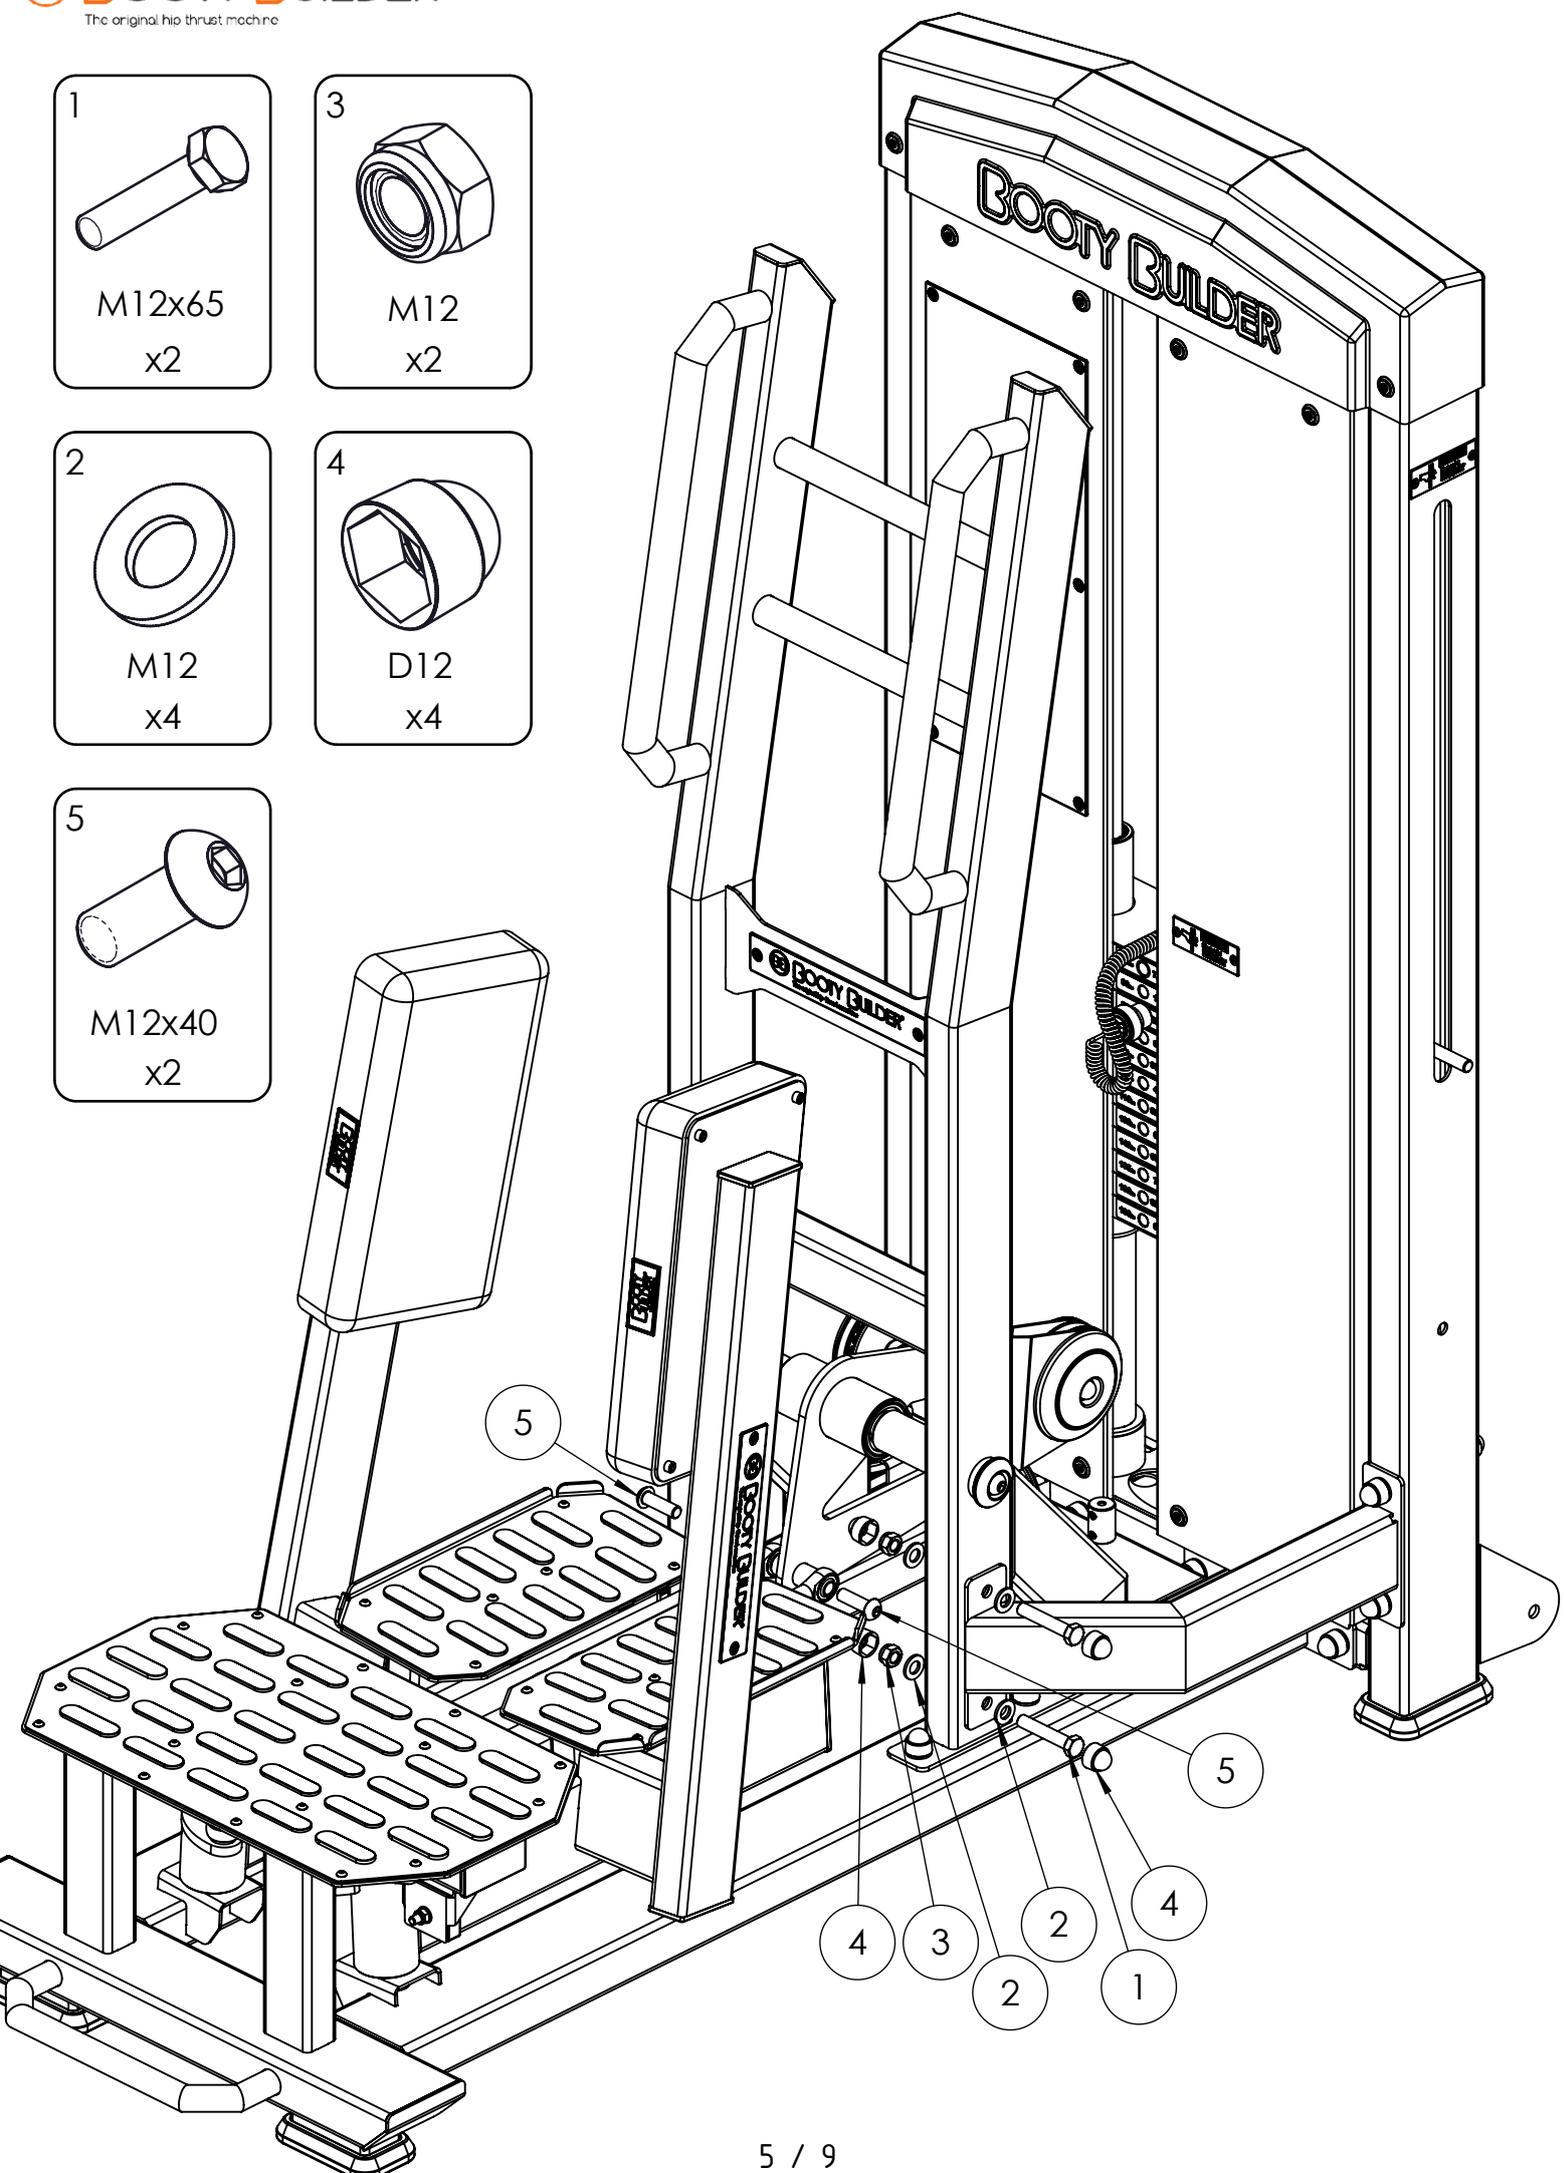



1  
  
 D30x88  
 x4


2  
  
 M12x90  
 x2

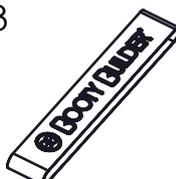
3  
  
 Rubber  
 x2

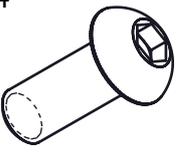
4  
  
 M12x70  
 x2


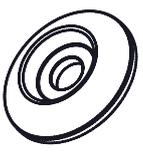
5  
  
 x4

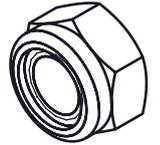6  
  
 M12  
 x2

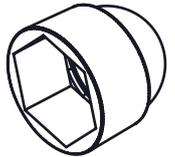7  
  
 D12  
 x2

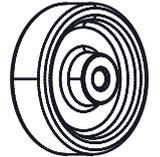
8  
  
 Wheel  
 x2

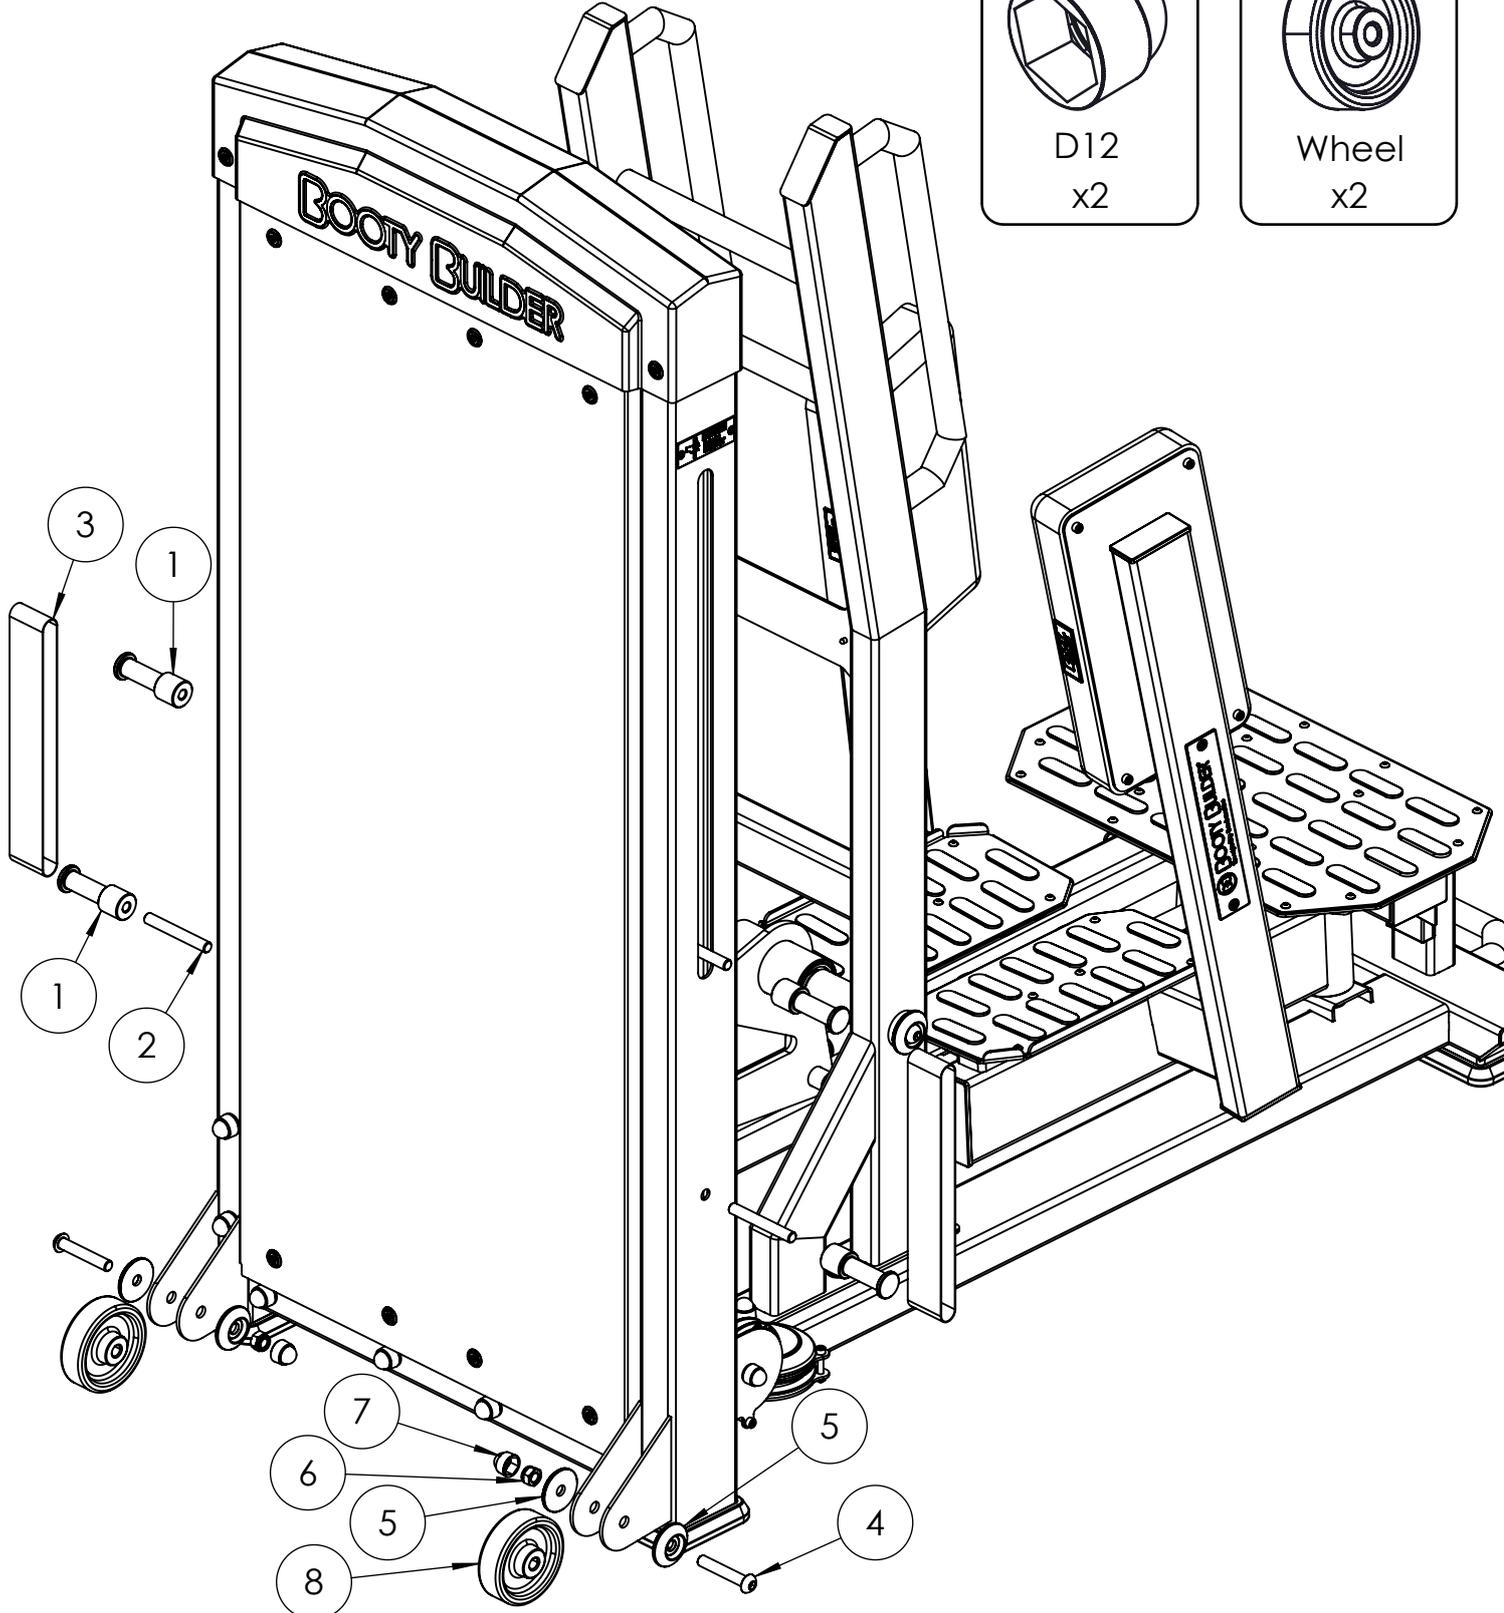

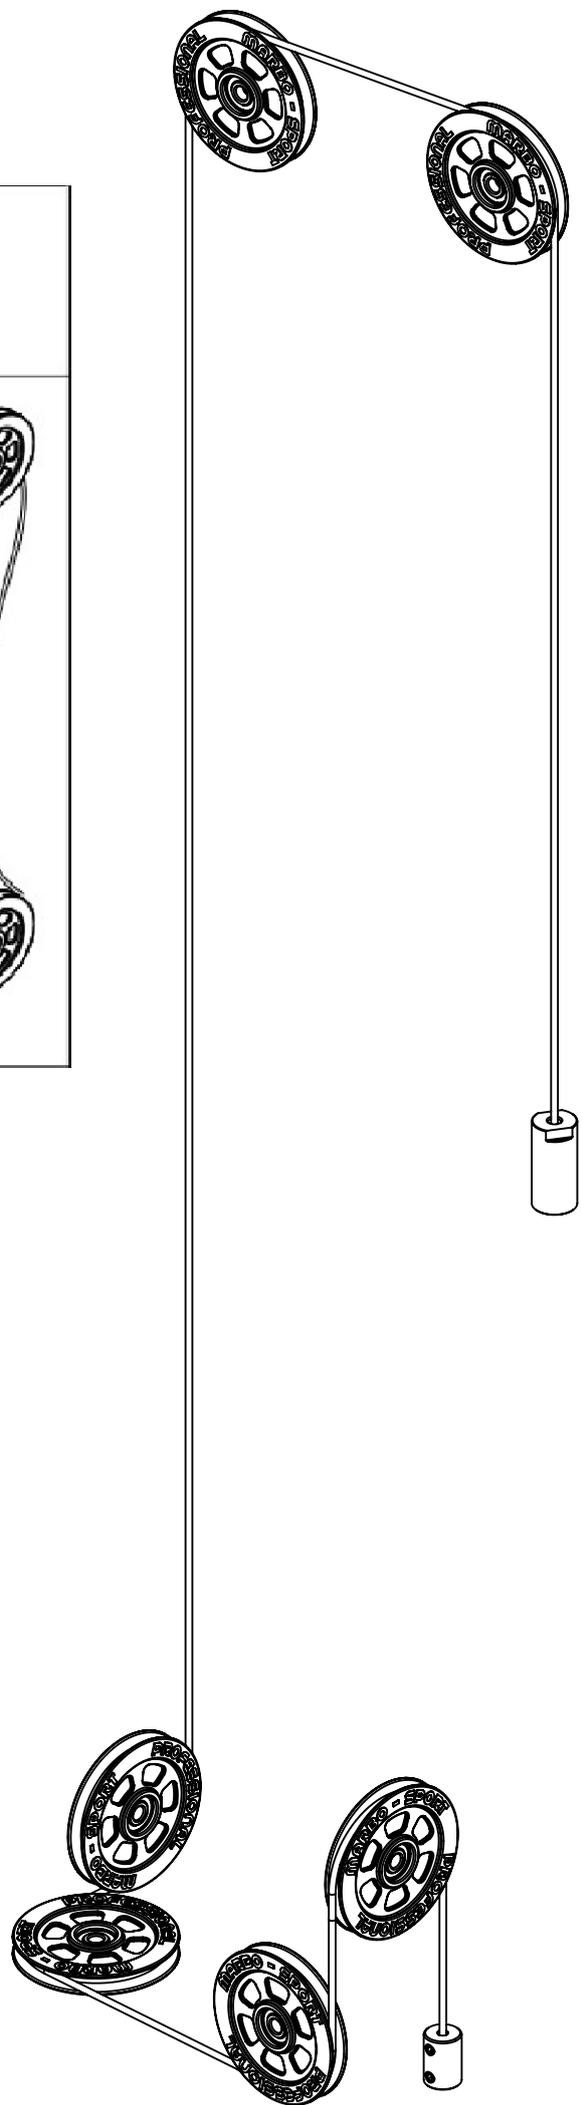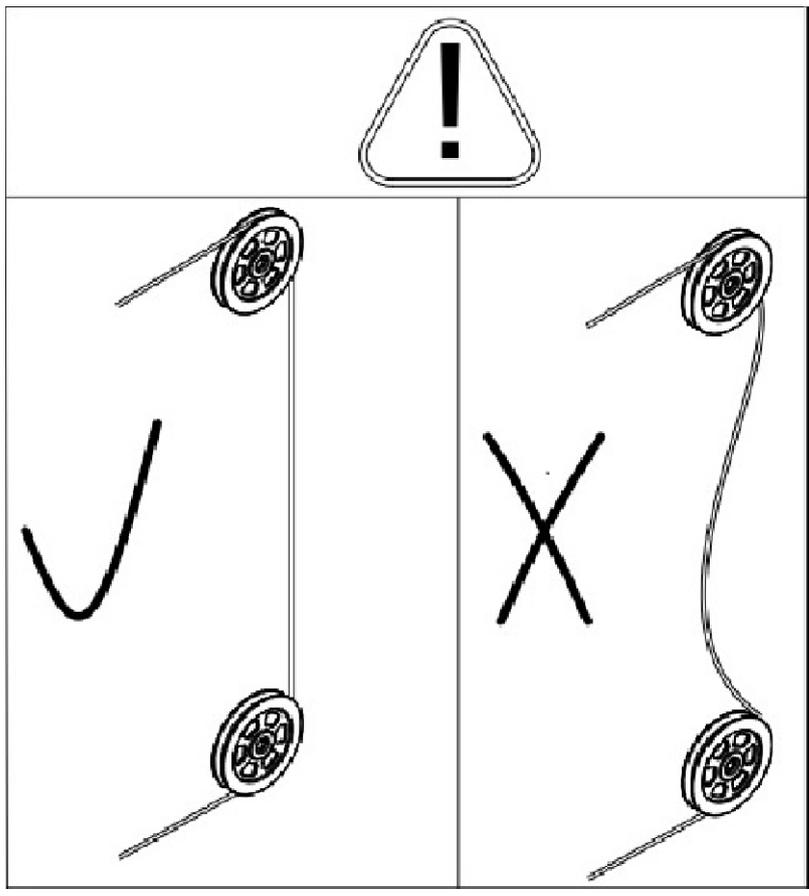


## Stack cable tensioning


1

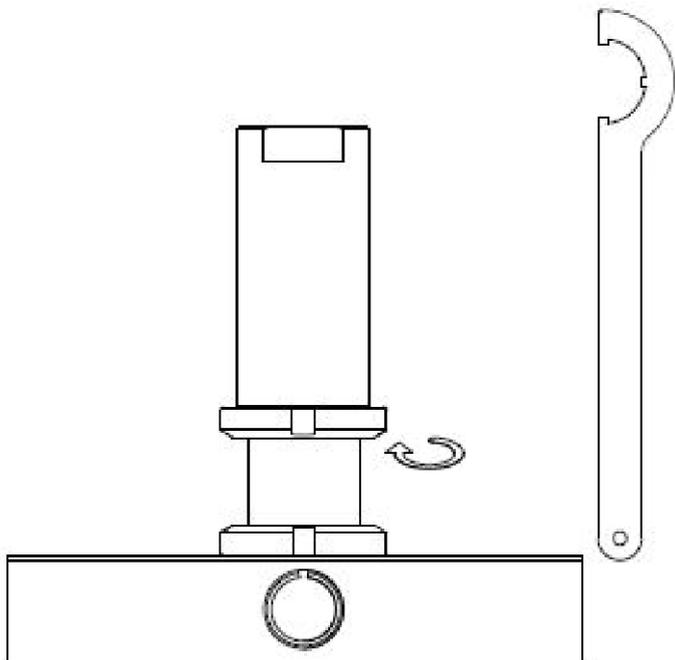


2

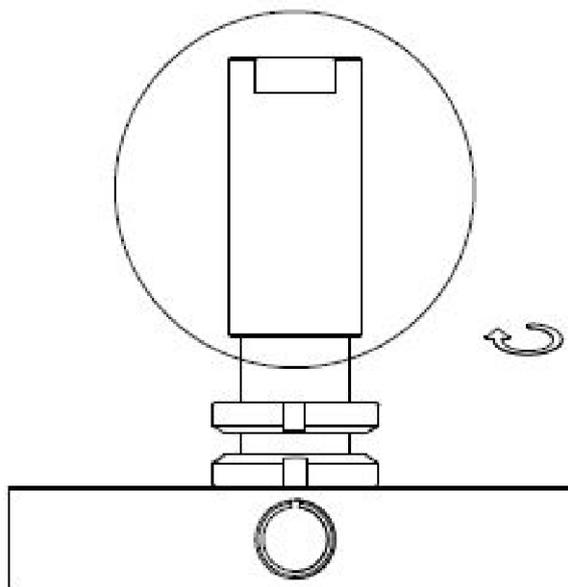


3

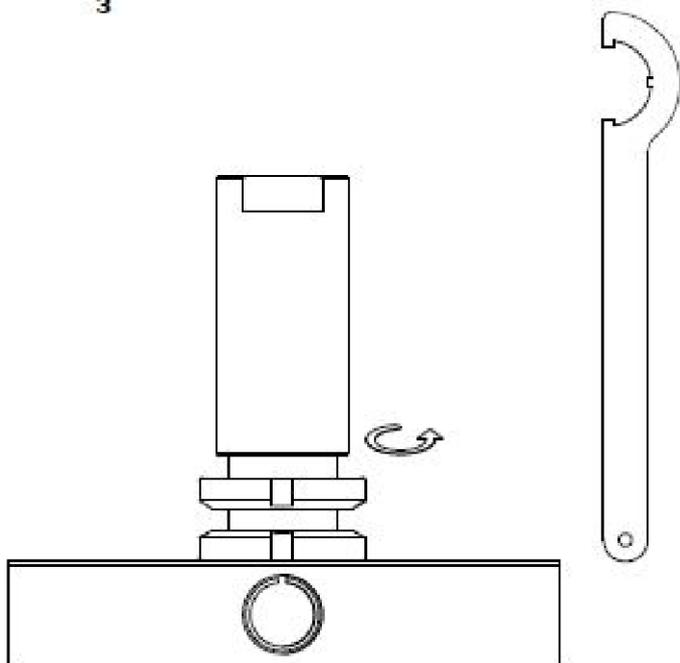

4

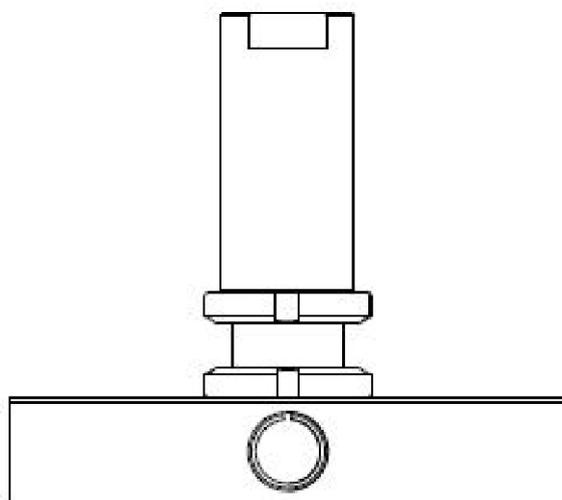

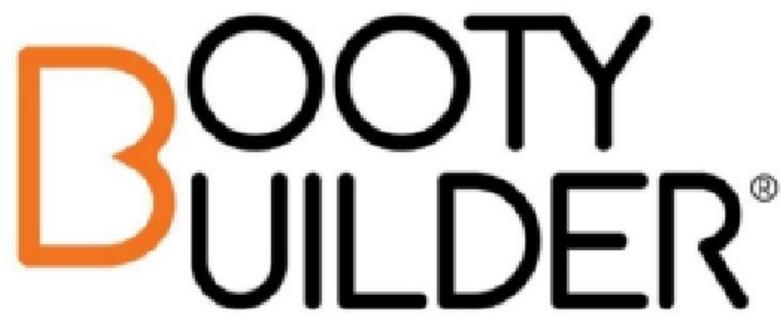

## **PREVENTATIVE MAINTENANCE SCHEDULE**

To ensure the full safety of Booty Builder equipment for customers, the facility operator is required to periodically inspect the equipment in the gym as follows:

### **Monthly**

- Inspect and remove any objects caught under the machine.
- Check the tension of the cables.
- Lubricate the guide rods using 3-IN-ONE oil on a cloth.
- Check for any nuts/bolts that may be loose.
- Check for any upholstered pieces that may be loose.
- Check for wear on pivot assemblies.

### **Every 2 Months**

- Check the condition of bearings.
- Check the condition of the guide wheels.

In case of equipment failure, please report the fault to our service team by emailing [serwis@marbo-sport.pl](mailto:serwis@marbo-sport.pl) or calling +48 41 274 23 80 extension 864 and stop using the equipment until the problem is fixed